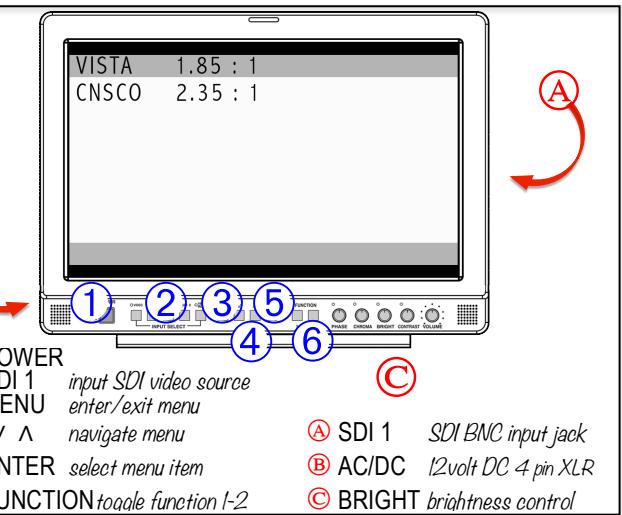
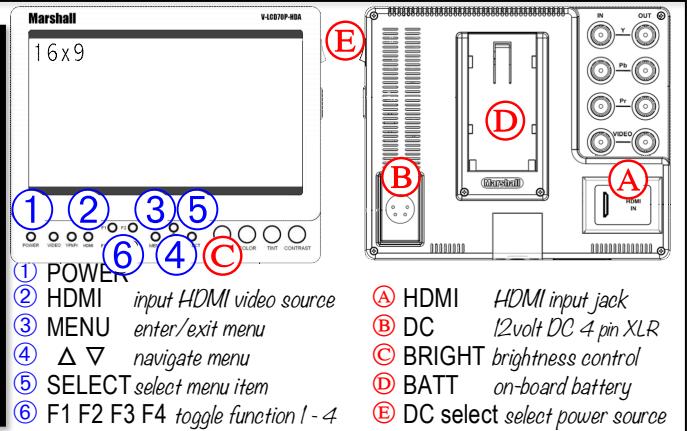


PANASONIC 17" LH1700W**SET UP / OPERATION**

1. reset Factory
- MENU③ ► SYSTEM CONFIG [ENTER]⑤ ► SETUP LOAD [ENTER]⑤ ► FACTORY ► YES
2. turn on Exhaust Fan (off only for sound)
- MENU③ ► SYSTEM CONFIG [ENTER]⑤ ► FAN MOTOR [ENTER]⑤ ► ON
3. check White Point (*Factory default*)
- MENU③ ► VIDEO CONFIG [ENTER]⑤ ► COLOR TEMP [ENTER]⑤ ► D65 @
4. select Aspect Ratio (*user defined*)
- MENU③ ► MARKER [ENTER]⑤ ► MARKER 16:9 [ENTER]⑤ ► VISTA 1.85
► CNSCO 2.35
5. Center Marker
- MENU③ ► MARKER [ENTER]⑤ ► CENTER MARKER [ENTER]⑤ ► ON
6. Function Button(s) Re-Map
- MENU③ ► SYSTEM CONFIG [ENTER]⑤ ► FUNCTION 1 [ENTER]⑤ ► BLUE ONLY*
- FUNCTION 2 [ENTER]⑤ ► SUB WINDOW
- MENU③ ► SYSTEM CONFIG [ENTER]⑤ ► SUB WINDOW [ENTER]⑤ ► WFM


**MARSHAL 7" LCD70XP****SET UP / OPERATION**

1. select power source (E) and reset to Factory
- MENU③ ► System Configuration [SELECT]⑤ ► Manufacture Default [SELECT]⑤
2. select HDMI② for Canon 7D
3. check White Point (*Factory default*)
- MENU③ ► Video Configuration [SELECT]⑤ ► Color Temperature [SELECT]⑤ ► D65 @
4. select Marker for Canon 7D (*camera INFO display off*)
- MENU③ ► Marker Configuration [SELECT]⑤ ► Full Screen [SELECT]⑤ ► 85% safe
► Center Marker [SELECT]⑤ ► On
5. Function Button(s) Re-Map
- MENU③ ► Function Presets [SELECT]⑤ ► Function on F1 [SELECT]⑤ ► Check Field*
► Function on F2 [SELECT]⑤ ► Peaking Filter
► Function on F3 [SELECT]⑤ ► Image Flip
► Function on F4 [SELECT]⑤ ► Marker Enable

**SMALLHD 4" DP4****SET UP / OPERATION**

1. reset to Factory
- MENU [PUSH]② ► System [PUSH]② ► Factory Reset [PUSH]② ► Reset
2. set Voltage Meter
- MENU [PUSH]② ► System [PUSH]② ► Voltage Meter [PUSH]② ► ON (7-18 volts)
3. select Marker for Canon 7D (*camera INFO display off for max image size*)
- MENU [PUSH]② ► Guides [PUSH]② ► Crosshair [PUSH]② ► Select ► Small-Medium-Large
► Aspect [PUSH]② ► OFF
(full frame fits screen, 16x9 video frame does not fill screen)
5. Function Button(s) Re-Map

A function	► hold A③	► Focus Assist [PUSH]②
B function	► hold B④	► Image Flip [PUSH]②

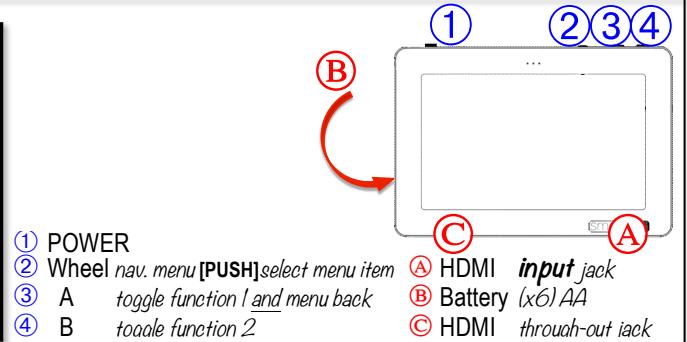**Calibrate Monitor**

1. set monitor white reference to D65 @
2. send SMPTE rec709 color bars to monitor
 - Sony F3 – BARS (*see TechSheet_F3*)
 - Canon 7D – 1. format CF card with 7D
 - 2. connect CF card to computer (Card Reader)
 - 3. download EOS bars IMG_0001.JPG.sitx
 - 4. extract(unstuff) IMG_0001.JPG to CF card
 - EOS DIGITAL : DCIM : 100EOS7D
3. adjust monitor BRIGHTNESS
 - blend black (B), 3.5 ire (C), 7.5 ire (D) chips
 - faint 11.5 ire (E) chip visibility
4. enable monitor blue gun
 - Panasonic 17" LH1700W – BLUE ONLY
 - Marshall 7" LCD70XP – Check Field (blue)
 - Small HD 4" DP4 - BlueOnly
5. adjust monitor CHROMA/COLOR · CONTRAST · TINT
 - unify color chips with blue/black bars
6. disable monitor blue gun

